

 
# SN10 Quick Reference

## CLUB

### Club Mode Pages: Map, Final Glide, Settings and Wind

Page=Help

Cursor=Enter



### Club Mode Preflight

(Press: **Enter** on start)

- Verify altimeter setting
  - ("Q")
- Set desired finish safety altitude
  - ("Arv")
- Check battery voltage
  - ("Volt")
- Set final glide wind
  - (Bottom of "Measured Wind" page)
- Set water and bugs
  - ("Bugs": 5% without gear doors)
  - ("Water": Weight of pilot, pax and gear in pounds)

# CLUB

## Page Attributes: Settings

### Displays

Altitude/Altimeter  
 Final Glide Reserve  
 Vario Speed  
 Water Ballast/Bugs  
 Flight Time  
 Battery Voltage

### User Modified

Altimeter  
 Final Glide Reserve  
 Vario Speed  
 Water Ballast/Bugs

## Page Attributes: Final Glide

### Displays

Destination  
 MacCready  
 Bearing/Distance  
 Vario Average  
 Glide Slope Deviation  
 Speed To Fly Chevrons

### User Modified

Destination  
 MacCready

## Page Attributes: Moving Map

### Displays

Orientation/Center  
 Zoom  
 Airspace  
 Alternate Airports (5)  
 Glidepath Deviation To Alternate

### User Modified

Orientation/Center  
 Zoom

## Page Attributes: Wind

### Displays

Measured Wind  
 Final Glide Set Wind

### User Modified

Final Glide Set Wind

# CLUB

(Detailed Preflight)

Yellow SN10 Switch: On (up)

Follow directions on initialization screens:

CedrVI? – Press Enter (Cursor knob)

Club Mode? – Press Enter (Cursor knob)

When SN10 fully booted:

Twist **Page** knob clockwise until pages stop changing.

Twist **Page** knob counter clockwise one click (one page.)

Twist **Cursor** knob until "Alt" is highlighted.

Twist **Value** knob until 5000 (at Cedar Valley) is indicated.

Twist **Cursor** knob until "Arv" is highlighted.

Twist **Value** knob until 1000 is indicated.

Twist **Cursor** knob until "Water" is highlighted.

Twist **Value** knob until weight of pilot plus passenger and baggage is indicated.

Twist **Cursor** knob until "Bugs" is highlighted.

Twist **Value** knob until 5% is indicated.

# COMPETITION

**Competition Mode Pages = Task, Status, Alternates, GPS, Timer, Flt Summary, Vario Tune, Final Glide, Settings and Wind**

 
**Setup Pages (access from Vario Tuning page in Competition mode): Audio Setup, Variometer, Units, Site Select, Point Edit, Glide Polar, Airspeed Cal, SN10 Options 1, SN10 Options 2, SN10 Resets, Raw Sensors**

**Optional Pages: Simple Final Glide, Custom, LD Calculator, Thermal Heightband, Flarm Pages (2)**

## SN10 Preflight and Quick Reference

Page=Help

Cursor=Enter



### Competition Mode Preflight

(Press: **Help** on start)

- Verify altimeter setting
  - ("Q")
- Set desired finish altitude
  - (Field Elev + Safety) ("Arv")
- Check battery voltage
  - ("Volt")
- Set final glide wind
  - (Bottom of "Measured Wind" page)
- Set water and bugs
  - ("Bug"s: 5% without gear doors)
  - ("Water": Weight of pilot, pax and gear in pounds)
- Set timers (if desired): STI/PST
- Enter desired task
- Verify/Set Task Rules

## **Competition Pages (Additional From Club Pages)**

### **bPage Attributes: Task**

**Displays**

Task Start/TP/Finish

Glide Slope

Task Finish

MacCready

Time To Finish Task (@ Selected MC)

Time Remaining (Time Limited Task)

Distance To Finish Task

**User Modified**

Task Start/TP/Finish

### **Page Attributes: Status**

**Displays**

Vario Average

Next Point

Distance Out

Distance Left/Right

Bearing To

Altimeter

Groundspeed

Timer

MacReady Setting

Water Ballast

Bug Setting

Wind Speed

Altitude

Finish Height

Final Task Glidepath Deviation

**User Modified**

Mark As Achieved

Copy From Wind Page

### **Page Attributes: Thermal Heightband**

**Displays**

Altitude

Climb Rate

Previous Two Thermals

Final Glide Altitude

MacCready

Thermal Average

Vario Average

**User Modified**

**Competition Pages  
(Additional From Club Pages)**

**Page Attributes: Alternates**

<b>Displays</b>	<b>User Modified</b>
Closest Alternate	
First Alternate	Selectable
Second Alternate	Selectable
Alternates Information	
Go Direct	Go Direct
Bearing To	
Distance To	
Restore Task	Remove Direct To

**Page Attributes: GPS Position**

<b>Displays</b>	<b>User Modified</b>
GPS On/Off	GPS On/OFF
GPS Quality	
GPS Position	
GPS Mark Position	Store Position

**Page Attributes: Flight Summary**

<b>Displays</b>	<b>User Modified</b>
Distance Flown	
Distance To Go	
Time On Task	
Speed On Task	Units
% Of Time Climbing	
Average Climb Rate	

**Page Attributes: Vario Tuning Page**

<b>Displays</b>	<b>User Modified</b>
Vario Speed	Vario Speed
Vario Scale	Vario Scale
OAT	
Battery Voltage	
Flight/Setup	Display Setup Pages